

- In addition to routine checks for each use, PPE should regularly undergo a detailed inspection by a competent person.

Petzl recommends an inspection every 12 months and after any exceptional event in the life of the product.

- PPE inspection should be conducted with the manufacturer's Instructions for Use.

Download the instructions at PETZL.COM.

EASYTOP / EASYTOP WALL



EASYTOP WALL

1. Known product history

Any PPE showing unexpected degradation should be quarantined, pending a detailed inspection.

The user should:

- Provide precise information on the usage conditions.
- Report any exceptional event regarding his/her PPE.

(Examples: fall or fall arrest, use or storage at extreme temperatures, modification outside manufacturer's facilities...)

2. Preliminary observations

Verify the presence and legibility of the serial number and the CE mark.

Note: the serial number code on our products is evolving. Two types of code will coexist.

See below for details on each serial number code.

Code A:

00 000 AA 0000

Year of manufacture
Day of manufacture
Name of Inspector
Incrementation

Code B:

00 A 0000000 000

Year of manufacture
Month of manufacture
Batch number
Incrementation




EASYTOP


Verify that the product lifetime has not been exceeded.

Compare with a new product to verify there are no modifications or missing parts.


3. Inspecting the frame

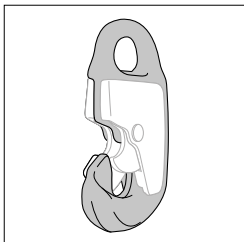

- Check the condition of the frame (marks, cracks, wear, deformation, corrosion...).

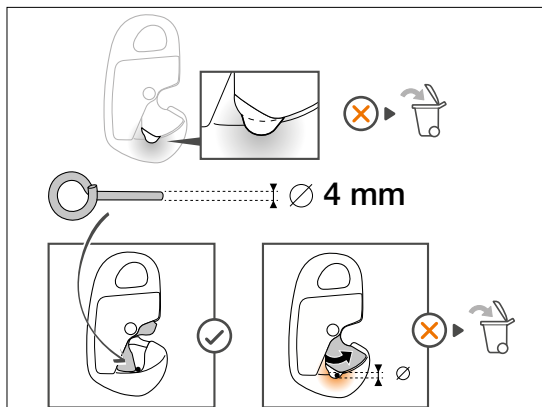


- Check for wear caused by rope running through the device. Use the included inspection pin or a 4mm diameter bar

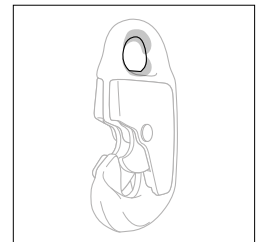


- Check the condition of the anchor attachment hole (marks, cracks, wear, deformation, corrosion...).


4. Inspecting the primary gate

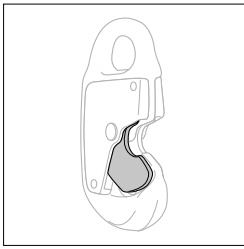


- Check the condition of the gate (marks, cracks, wear, deformation, corrosion...).

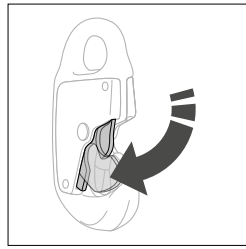

- Manually verify that the gate opens completely.

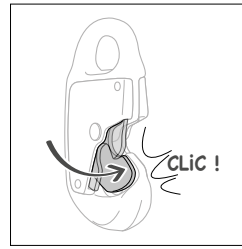


- Verify that the gate closes automatically and that the return spring works.

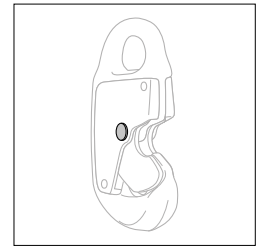


- Check the condition of the rivet (cracking, deformation, corrosion...).


5. Checking the auto-locking gate

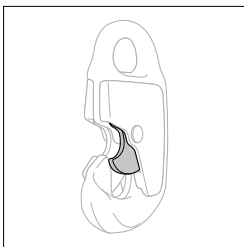


- Check the condition of the gate (marks, cracks, wear, deformation, corrosion...).

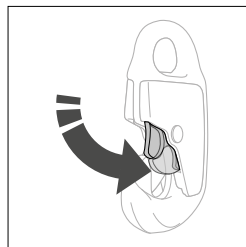

- Manually verify that the gate opens completely.

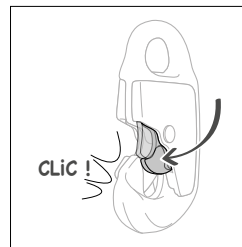


- Verify that the gate closes automatically and that the return spring works.

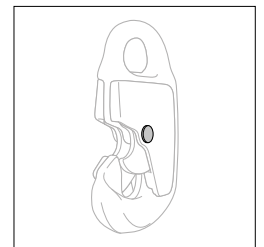


- Check the condition of the rivet (cracking, deformation, corrosion...).


6. Checking the EASYTOP WALL anchor

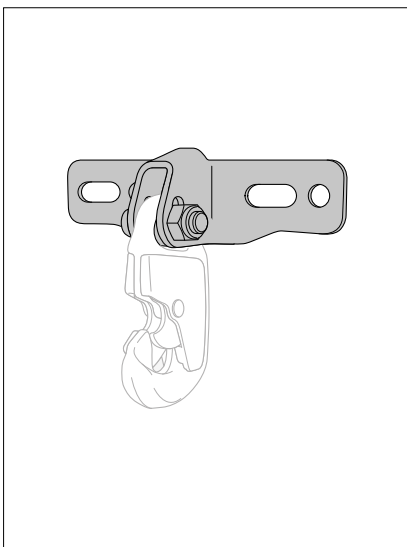

- Check the condition of the anchor (marks, cracks, wear, deformation, corrosion...).

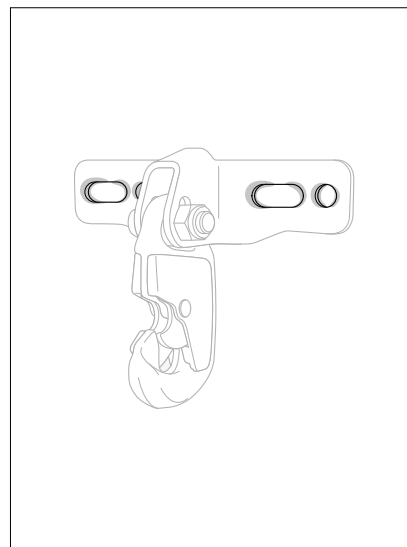

- Check the condition of the structure mounting holes (marks, cracks, wear, deformation, corrosion...).

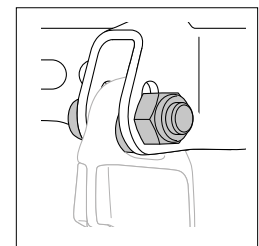

- Check the condition of the EASYTOP installation bolt (marks, cracks, wear, deformation, corrosion...).